

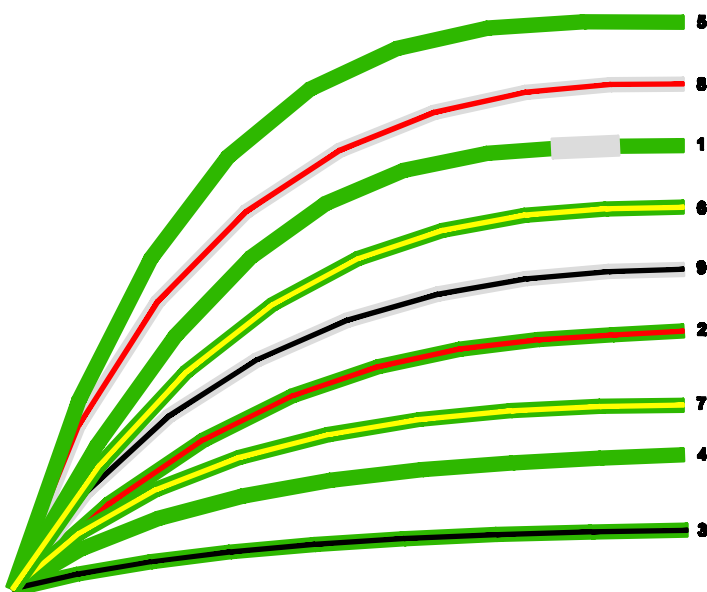


# 1969-70 Flasher Switch

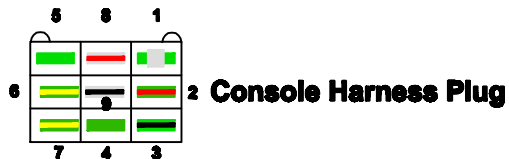


| Color     | Ga | Connects to:         | Connection type: |
|-----------|----|----------------------|------------------|
| G         | 16 | Turn Flasher         | Plug             |
| W/R       | 16 | Rear Right Turn/Stop | Plug             |
| G/ W band | 16 | Hazard Flasher       | Plug             |
| G/Y       | 16 | Stop Light Power     | Plug             |
| W/Bk      | 16 | Rear Left Turn/Stop  | Plug             |
| G/R       | 16 | Front Left Turn      | Plug             |
| G/Y       | 16 | Stop Light           | Plug             |
| G         | 16 | Turn Flasher Power   | Plug             |
| G/Bk      | 16 | Front Right Turn     | Plug             |

\*Wire gauge approximate.

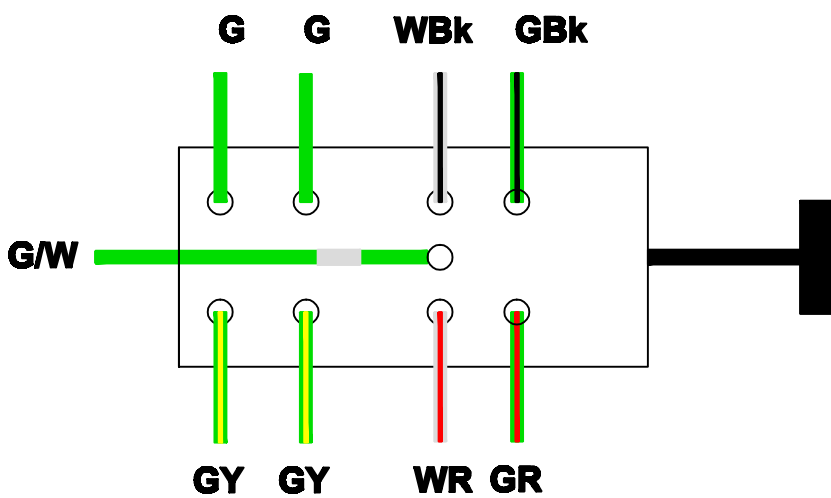

Some wires on switch are black.

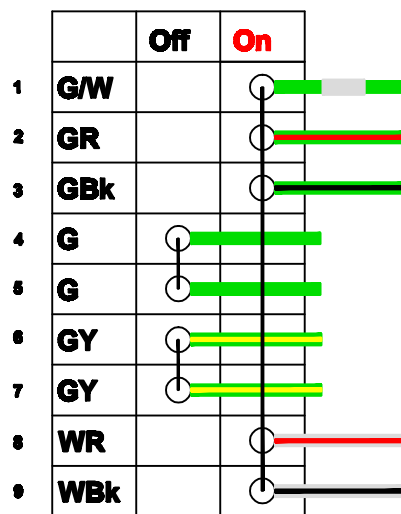

This drawing is for information only and may contain errors.

By Curtis Marsten ©2019