



***Ignition switch pattern. Maybe, if your switch hasn't been replaced. Wire positions may be different.

Terminals:
 B-battery
 S-starter (also connects the resistor bypass wire)
 I-ignition, to fuse box and coil resistor
 R-resistor bypass to coil when starting
 A-accessory

1968 SPL/SRL Dash Wire Hookup