



1968 Flasher Switch




Console Harness Plug

Color	Ga	Connects to:	Connection type:
G	16	Turn Flasher	Plug
G/Bk	16	Right Turn	Plug
G/ W band	16	Hazard Flasher	Plug
G/R	16	Left Turn	Plug
G/ R band	16	Flasher Power	Plug

*Wire gauge approximate.

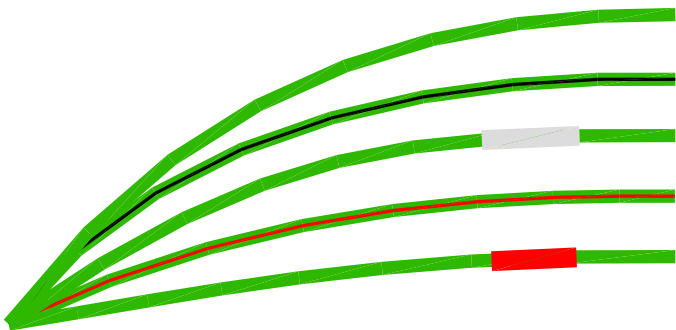

Switch
All wires on switch are black.

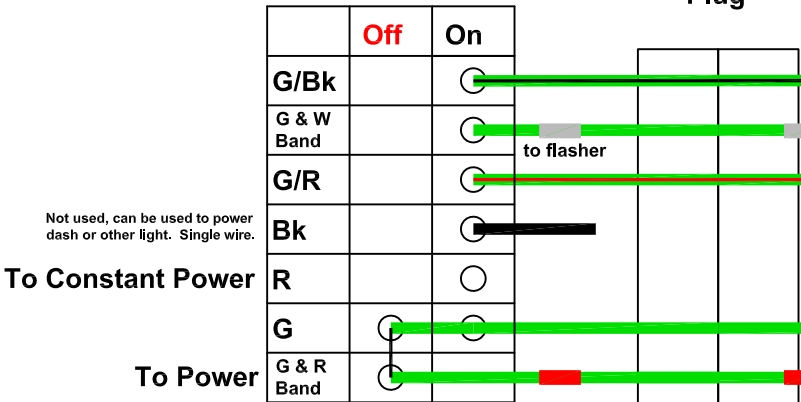


Not used, can be used to power dash or other light. Single wire.

To Constant Power

To Power

To fuse box, hood and rear harness.


To flasher power.

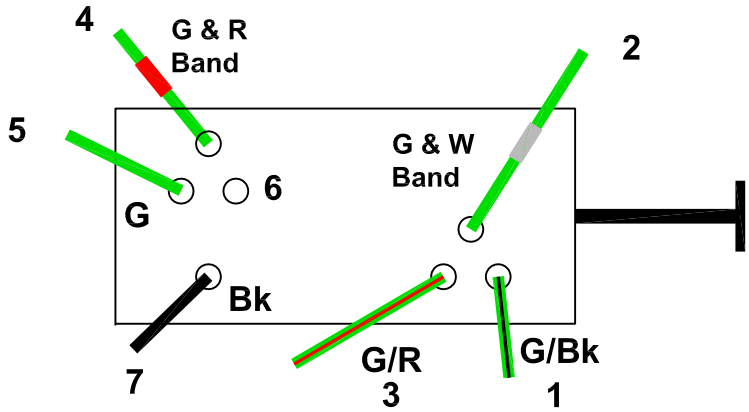

All wires on switch are black.
For 1968 terminals 6 and 7 are not used.

	Off	On
G/Bk		○
G & W Band		○
G/R		○
Bk		○
R	○	○
G	○	○
G & R Band	○	○

To Turn Signal Column Switch

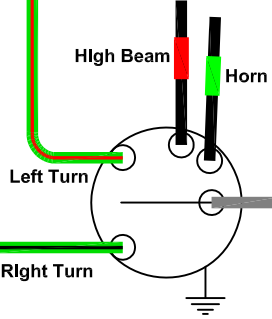

This drawing is for information only and may contain errors.

By Curtis Marsten ©2019